



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **TOYOTA** MOD. **AVENSIS VERSO*** YEAR **03** → PETROL
DIESEL

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens on the servobrake support in the engine compartment.
Position the modular systems and the modules under the dashboard, driver's side.
- CENTRAL UNIT POSITION**
- POWER SUPPLY** **+30:** connect directly to the positive pole of the battery.
-31: connect directly to the car body.
- IGNITION WIRE** **+15/54:** connect to the BLUE/RED wire in the 4 way grey connector, in the fuse box.
- DIRECTION INDICATORS** Connect to the LIGHT BLUE wire at the position nr.2 and to the LIGHT BLUE wire at the position nr.3, in the 9 way connector, on the relay blinker, on the left of the steering column.
- ELECTRIC WINDOWS**
- Positive control signal**
Front window, driver's side:
cut the RED wire at the pos. nr. 1, in the 20 way white connector, in the driver's side push-button panel.
Front window, passenger's side:
cut the RED wire at the pos. nr. 6, in the 12 way white connector, in the passenger's side push-button panel.
Rear window, driver's side:
cut the RED wire at the pos. nr. 6, in the 12 way white connector, in the driver's side push-button panel in the rear door.
Rear window, passenger's side:
cut the RED wire at the pos. nr. 6, in the 12 way white connector, in the passenger's side push-button panel in the rear door.
- ACTIVAT./DEACTIVATION CONTROLS**
- | Connections antitheft/vehicle | | |
|-------------------------------|-------------|---|
| Art.3800 | Vehicle | Position |
| YELLOW/BLACK | BLUE/WHITE | Pos. nr.11, in the 18 way white connector |
| GREY/BLACK | BLACK/WHITE | Pos. nr.10, in the 18 way white connector |
| VIOLET | LIGHT BLUE | Pos. nr.2, in the 9 way connector |
| ORANGE | Ground | Car body |
| VIOLET/WHITE | Ground | Car body |
| ORANGE/WHITE | Ground | Car body |
- The 18 way white connector is located behind the driver's side sill cover; the 9 way connector is located on the relay blinker, on the left of the steering column.
Refer to the **A diagram** of the dedicated installation manual inside the kit of the antitheft.
- IMMOBILISATION POINT** **Fuel pump**
Cut the BLUE/BLACK wire with SILVER references, at the position nr.5 of the 13 way blue connector located behind the driver's side left lateral door.
- STARTER** **+50:** Cut the 1,5 mm² RED wire located in the wiring harness coming out of the connector of the ignition key.
- BONNET SWITCH** Install an additional switch on the headlamp support plate, driver's side.
- DOORS AND BOOT SWITCHES** Connect to the RED/WHITE wire at the position nr. 1, in the 34 way connector, in the frontal part of the fuse box.