



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **TOYOTA** MOD. **AVENSIS*** YEAR. **02** → PETROL DIESEL

* Models with original equipment keyless entry system

- ALARM/SIREN POSITION** Position the compact alarms and the sirens in the engine compartment, on the shock absorber support, driver's side. Pass the cables through the original rubber core hitch located behind the cover of the wheel housing, driver's side.
- CENTRAL UNIT POSITION** Position the modular system and the modules under the dashboard, driver's side.
- POWER SUPPLY** + **30**: connect to the ground terminal in the general power supply connector in the fuse box.
- **31**: connect with a cable terminal directly to the car body.
- IGNITION WIRE** + **15/54**: connect to the GREEN wire with GREY references located in the wiring harness coming out of the connector of the four direction indicators.
- DIRECTION INDICATORS** Connect to the GREEN wire with GREY references and to the GREEN/YELLOW wire with GREY references located in the wiring harness coming out of the connector of the four direction indicators.
- ELECTRIC WINDOWS** **Positive control signal**
Front window, driver's side:
cut the 1,5 mm² GREEN wire located in a wiring harness coming out of the respective switch connector.
Front window, passenger's side:
cut the 1,5 mm² GREEN/WHITE wire (positive polarity) and the RED/BLUE wire (negative polarity) located in the wiring harness coming out of the 13 way white connector, behind the left lateral panel, driver's side.
- ACTIVAT./DEACTIVATION CONTROLS** **Connections antithefts/vehicle**
- | 38XX | Vehicle | Position |
|--------------|------------------|-----------------------|
| GREY/BLACK | BLUE/WHITE | 15 v. white connector |
| YELLOW/BLACK | BLUE/BLACK | 15 v. white connector |
| VIOLET/WHITE | ground | car body |
| ORANGE | BLUE/GREY | radio central |
| VIOLET | BLUE/ORANGE/GREY | radio central |
| ORANGE/WHITE | positive | in the fuse box |
- Refer to the **C diagram** of the Globe 3800 installation manual.
- IMMOBILISATION POINT 1** **Gasoil pump**
Cut the PINK/BLACK wire, at the position nr. 7, in the 22 way white connector, the first on the upper part in the central behind the glove compartment, passenger's side.
- IMMOBILISATION POINT 2** **Relay pump under lock**
Cut both the BLACK/ORANGE wires in the wiring harness coming out of the relay marked "EFI" in the box near the battery.
- BONNET SWITCH** Install an additional switch on the headlamp support plate, near the bonnet bumper rubber.
- DOORS SWITCH** Connect to the RED/WHITE wire with GREY references located in the wiring harness coming out of the radio central connector of the lockings, on the left of the steering column.
- BOOT SWITCH** The protection of the boot is obtained making the connection on the line of the doors.