



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE **TOYOTA**

MOD. **AVENSIS VERSO**

YEAR **02** →

PETROL   
DIESEL

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens on the wheelhouse, passenger's side.
<b>CENTRAL UNIT POSITION</b>	The modular systems and the modules should be positioned under the dashboard, driver's side.
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the WHITE/RED wire located in the 6 way blue connector, in the fuse box. <b>-31:</b> connect with a ground terminal located behind the driver's side bulkhead.
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the BLUE/RED wire located in the white connector, in the fuse box, above the fuses.
<b>DIRECTION INDICATORS</b>	Connect to the LIGHT BLUE wires at the positions nr. 2 and nr. 3, in the 9 way connector, on the relay of the direction indicators on the left of the steering column.
<b>ELECTRIC WINDOWS</b>	<b>Negative control signal</b> <b>Front window, driver's side:</b> cut the RED wire at the pos. nr. 1, in the 20 way white connector, in the driver's side push-buttons panel. <b>Front window, passenger's side:</b> cut the RED wire at the pos. nr. 6, in the 12 way white connector, in the passenger's side push-buttons panel. <b>Rear window, driver's side:</b> cut the RED wire at the position nr. 6, in the 12 way white connector, in the driver's side push-buttons panel. <b>Rear window, passenger's side:</b> cut the RED wire at the position nr. 6, in the 12 way white connector, in the passenger's side push-buttons panel.
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> Connect to the BLUE/RED wire at the pos. nr. 1 (lock) and to the BLACK/WHITE wire at the pos. nr. 18 (unlock) located in the 18 way white connector, behind the driver's side sill cover. As alternative: <b>Direct motor control</b> Cut the BLACK/WHITE wire at the pos. nr. 4, in the 9 way grey connector, in the fuse box (lock); cut the BLUE/WHITE wire at the pos. nr. 1 in the 9 way grey connector, in the fuse box (unlock).
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the BLUE/BLACK wire with SILVER references, at the pos. nr. 5, of the 13 way blue connector located behind the left lateral bulkhead, driver's side.
<b>STARTER</b>	<b>+50:</b> Cut the 1,5 mm <sup>2</sup> RED wire located in the wiring harness coming out of the connector of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate, driver's side.
<b>DOORS AND BOOT SWITCH</b>	connect to the RED/WHITE wire at the position nr. 1, in the 34 way connector, in the front part of the fuse box.