

CAR SECURITY

SPECIF	FIC VEHICLE ALARM FITTING INSTRUCTIONS	REV. 00
www.cobra.it		
MAKE TOYOTA	MOD. COROLLA VERSO YEAR 02 →	PETROL DIESEL X
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the passenger's s	ide wheel house.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashbothe steering column.	oard, on the left of
POWER SUPPLY	+30: connect to the WHITE wire located in the white connected part of the fuse box31: connect to an original ground terminal located behind bulkhead, driver's side.	
IGNITION WIRE	+15/54: connect to the WHITE/BLACK wire at the pos. nr. 5, in connector, in the fuse box.	the 6 way black
DIRECTION INDICATORS	Connect to the GREEN/YELLOW wire at the position nr GREEN/BLACK wire at the position nr. 11, in the 24 way white fuse box.	
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the RED wire in the 20 way white connector, in the push-bu driver's side door. Front window, passenger's side: cut the YELLOW wire in the 12 way white connector, in the push the driver's side door.	·
CENTRAL DOORS LOCKING	Negative control signal Connect to the GREEN/YELLOW wire at the position nr. 3 (BLUE/RED wire at the position nr. 4 (unlock) in the 12 way blue of the driver's side sill cover.	
IMMOBILISATION POINT	Gasoil pump Cut the BLACK/WHITE wire at the position nr. 4, in the 18 way behind the passenger's side glove compartment.	white connector,
STARTER	+50: cut the BLACK wire at the pos. nr. 7, in the 10 way grey of the passenger's side glove compartment.	connector, behind

BONNET SWITCH Install an additional switch on the headlamp support plate, driver's side.

DOORS AND BOOT SWITCH Connect to the RED/YELLOW wire with at the position nr. 17, in the 24 way white

connector, in the fuse box.

ODOMETER Connect to the VIOLET/WHITE wire, in the 28 way white connector, on the central

behind the passenger's side glove compartment.