

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

REV.00

ΜΑΚΕ ΤΟΥΟΤΑ	MOD. COROLLA VERSO YEAR $02 \rightarrow DIESEL$
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the passenger's side wheel house.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, on the left of the steering column.
POWER SUPPLY	+30: connect to the WHITE wire located in the white connector, in the central part of the fuse box. -31: connect to an original ground terminal located behind the left lateral bulkhead, driver's side.
IGNITION WIRE	+15/54: connect to the WHITE/BLACK wire at the pos. nr. 5, in the 6 way black connector, in the fuse box.
DIRECTION INDICATORS	Connect to the GREEN/YELLOW wire at the position nr. 6 and to the GREEN/BLACK wire at the position nr. 11, in the 24 way white connector, in the fuse box.
ELECTRIC WINDOWS	 Positive control signal Front window, driver's side: cut the RED wire in the 20 way white connector, in the push-button panel on the driver's side door. Front window, passenger's side: cut the YELLOW wire in the 12 way white connector, in the push-button panel on the driver's side door.
CENTRAL DOORS LOCKING	Negative control signal Connect to the GREEN/YELLOW wire at the position nr. 3 (lock) and to the BLUE/RED wire at the position nr. 4 (unlock) in the 12 way blue connector, behind the driver's side sill cover.
IMMOBILISATION POINT	Fuel pump Cut the BLACK/RED wire at the position nr. 10, in the 24 way white connector, in the fuses box.
STARTER	+50: cut the BLACK wire at the pos. nr. 7, in the 10 way grey connector, behind the passenger's side glove compartment.
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.
DOORS AND BOOT SWITCH	Connect to the RED/YELLOW wire with at the position nr. 17, in the 24 way white connector, in the fuse box.
ODOMETER	Connect to the VIOLET/WHITE wire, in the 28 way white connector, on the central behind the passenger's side glove compartment.