



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

TOYOTA

MOD.

HILUX

YEAR

02 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens behind the driver's side headlamp.

CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the dashboard, driver's side.

POWER SUPPLY

+30: connect to the main wire located in the fuse box.

-31: connect to a ground terminal, under, on the left of the driver's side dashboard.

IGNITION WIRE

+15/54: connect to the wire at the position marked "+15" located in the wiring harness coming out of the connector of the ignition key.

DIRECTION INDICATORS

Connect to the GREEN/YELLOW and GREEN/BLACK wires located in the wiring harness coming out of the 13 way white connector, behind the fuses box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the GREEN wire in the 10 way white connector, on the push buttons panel inside the door.

Front window, passenger's side:

cut the RED/BLACK wire in the 10 way green connector, in the wiring harness coming out of the driver's side door.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the RED/WHITE wire (lock) and to RED/YELLOW wire (unlock) located in the 8 way green connector, in the front part of the fuses box.

IMMOBILISATION POINT

Injection central

Cut the VIOLET/RED wire, in the 22 way connector, on the injection central placed behind the passenger's side glove compartment.

STARTER

+50: cut the BLACK/WHITE wire, in the 8 way connector coming out of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS SWITCH

Connect to the BLACK/BLUE wire, in the 12 way connector, located in the front part of the fuses box.