

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

REV.00

маке ТОҮО	ОТА мо	DD. PREVI	A* YEAR	01 →	PETROL DIESEL	×
* Models with original equipment key	less entry system.					
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the bulkhead that divides the passenger's compartment and the engine compartment.					
CENTRAL UNIT POSITION	Install the modular systems and the modules under the dashboard, driver's side.					
POWER SUPPLY	 + 30: connect to the 4 mm² RED/WHITE wire located in a multiway connector in the fuse box. - 31: connect to one of the ground derivation located behind the left lateral bulkhead, druver's side. 					
IGNITION WIRE	+ 15/54: connect to the wire at the position marked "+15/54" located in the wiring harness coming out of the ignition key.					
DIRECTION INDICATORS	Connect to the GREEN/WHITE or GREEN/YELLOW wires, at the position nr.11, and to the GREEN/WHITE or GREEN/YELLOW wires, at the position nr.31, in the 32 way connector, placed behind the fuse box, above the sill cover, driver's side.					
ELECTRIC WINDOWS	Negative control signal Front window, driver's side: cut the GREEN wire located in the wiring harness coming out of the original push-botton panel of the windows control. Front window, passenger's side: cut the BLUE/BLACK wire located in the wiring harness coming out of the 12 way white connector, behind the sill cover, driver's side. Rear window, driver's side: cut the GREEN/WHITE wire located in the wiring harness coming out of the 26 way connector, behind the sill cover, passenger's side. Rear window, passenger's side: cut the BLUE/RED wire coming out of the 26 way connector, behind the sill cover, passenger's side.					
ACTIVAT./DEACTIVATION CONTROLS	Connections anti Art. 38XX GREY/BLACK YELLOW/BLACK VIOLET/WHITE ORANGE VIOLET ORANGE/WHITE	Vehicle WHITE/GREEN WHITE/RED Ground Ground GREEN/WHITE or GREEN/YELLOW	Position Pos. nr.6 connect Pos. nr.5 connect Car body Car body Pos.nr.11 white c Car body	. sill cover drive	er's side	
IMMOBILISATION POINT	Fuel pump Cut the BLACK/RED wire located in wiring harness coming out of the white connector of the fuel pump.					
STARTER	+50: Cut the wire at the position marked "+50" located in the wiring harness coming out of the connector of the ignition key.					
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.					
DOORS AND BOOT SWITCH	connect to the BLACK/YELLOW wire located in the wiring harness coming out of the 22 way white connector, on the right of the glove compartment, passenger's side.					