



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

TOYOTA

MOD.

PREVIA

YEAR

02 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the bulkhead that divides the passenger compartment and the engine compartment.

CENTRAL UNIT POSITION

Position the modular system and the modules under the dashboard, passenger's side.

POWER SUPPLY

+ 30: connect to the 4 mm² RED/WHITE wire in a multiway connector in the fuse box.
- 31: connect to one of the ground terminal locted behind the left lateral bulkhead, driver's side.

IGNITION WIRE

+ 15/54: connect to the wire at the position marked "+15/54" located in the wiring harness coming out of the connector of the ignition key.

DIRECTION INDICATOR

Connect to the GREEN/BLACK wire with SILVER reference and to the GREEN/YELLOW wire with SILVER reference located in a 24 way connector under the steering column.

ELECTRIC WINDOWS

Negative control signal
Front window, driver's side:
cut the RED/BLUE wire with silver references.
Front window, passenger's side:
cut the RED/YELLOW wire with SILVER references..

CENTRAL DOORS LOCKING

Negative control signal
Connect to the BLUE wire (unlock) and to the BLUE/WHITE wire (lock) located in the wiring harness coming out of the central door locking unit placed on the right of the steering column.

IMMOBILISATION POINT

Fuel pump
Cut the BLACK/RED wire located in the wiring harness coming out of the white connector of the fuel pump.

STARTER

+50: cut the wire, at the position marked "+50", in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS SWITCH

Connect to the RED/ORANGE wire with BROWN references located near the safety belt winder.

BOOT SWITCH

Connect to the RED/BLACK wire with GREY references directly to the original line.