


CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

REV. 00

ΜΑΚΕ ΤΟΥΟ	TA MOD. YARIS* YEAR. $01 \rightarrow DIESEL$
* Models with original equipment keyless entry system.	
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, driver's side. Pass the cables through the original rubber sleeve located in the bulkhead that divides the engine compartment from the passenger's compartment, driver's side.
CENTRAL UNIT POSITION	Position the modular system and the modules under the dashboard, driver's side.
POWER SUPPLY	 + 30: connect to the 3 mm² RED/WHITE wire located in a multiway connector at the entrance of the fuse box. - 31: connect with a terminal directly to the car body.
IGNITION WIRE	+ 15/54: connect to the 1,5 mm ² BLUE wire located in the wiring harness of the 13 way white connector, behind the left lateral bulkhead, driver's side.
DIRECTION INDICATORS	Connect to the 1,5 mm ² GREEN/BLACK wire with GREY references and to the GREEN/YELLOW wire with GREY references located in the bundle of cables behind the sill cover, driver's side.
ELECTRIC WINDOWS	 Positive control signal Front window, driver's side: cut the 1,5 mm² RED wire located in the 10 way white connector in the original push-button panel. Front window, passenger's side: cut the 1,5 mm² BLUE/RED wire located in the 13 way white connector behind the sill cover, driver's side.
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicleArt.3800VehiclePositionYELLOW/BLACKGREEN/ORANGE25 way white connectorGREY/BLACK+30Supply in the fuse boxVIOLET+30Supply in the fuse boxORANGE+30Supply in the fuse boxVIOLET/WHITE+30Supply in the fuse boxORANGE/WHITE+30Supply in the fuse boxORANGE/WHITE+30Supply in the fuse boxORANGE/WHITE+30Supply in the fuse boxORANGE/WHITE+30Supply in the fuse boxThe 25 way white connector is located on the central on the side of the instrument board.
	Refer to the diagram nr. 86.
IMMOBILISATION POINT	Fuel pump Cut the 1 mm ² BLACK/RED wire with GREY references located in the wiring harness behind the sill cover, driver's side.
STARTER	+50: Cut the 0,75 mm ² BLACK wire with GREY references located in the wiring harness coming out of the connector of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.
DOORS SWITCH	Connect to the 0,75 mm ² RED/YELLOW wire with GREY references located in the 25 way white connector on the central doors locking unit (light blue color) located to the left of the instrument board.
BOOT SWITCH	Install an additional switch on the rear bulkhead.

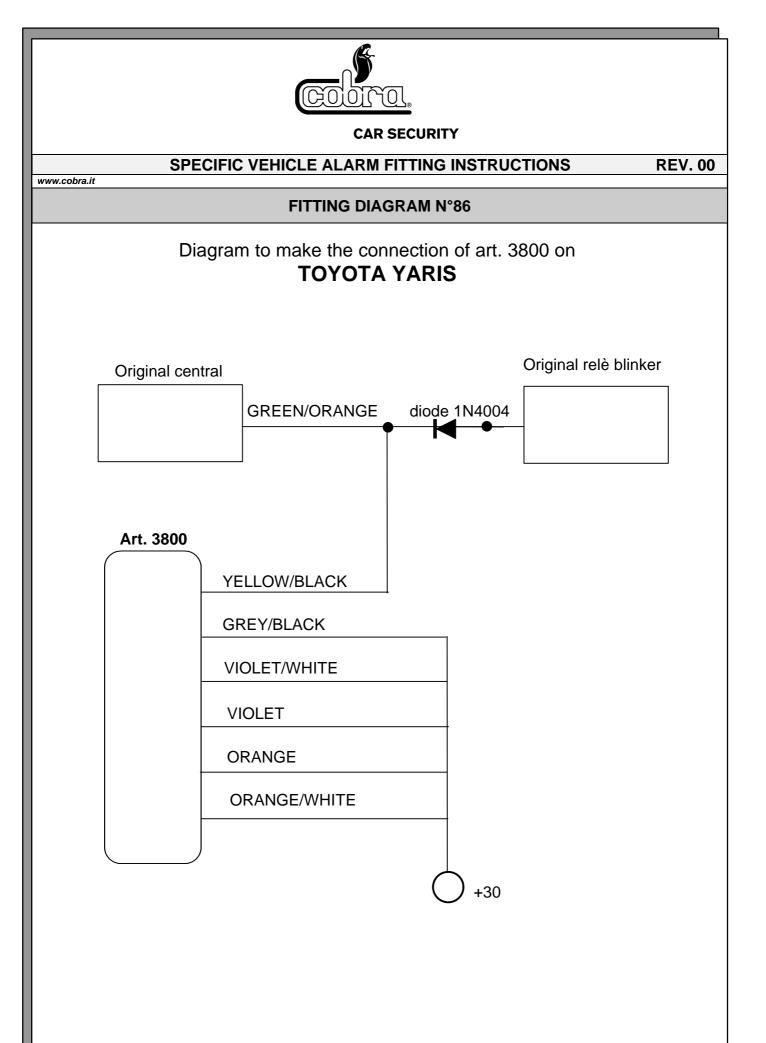

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.