

**ALARM POSITIONING**

Compact units and sirens  
 Control units and modules

- ⇒ On the shock absorber turret on the driver's side.  
 ⇒ Under the driver's dashboard.








**WIRING LOCATION**

- ⇒ Use the original harness on the driver's side (dismount the plastic bulkhead inside the mudguard).

**EARTH CONNECTION**

Positive and Negative

- ⇒ to the battery terminals.

FUNCTION AND MODALITY OF THE CONNECTION	VEHICLES WIRE COLOUR	WIRE POSITIONING
<b><u>DIRECTION INDICATOR LIGHTS:</u></b> 	<b>GREEN-YELLOW</b> ref. GREY 0,75 mmsq <b>GREEN-BLACK</b> ref. GREY 0,75 mmsq	<i>Connector:</i> 12-pin ORANGE_behind the driver's kick plate. <i>Position:</i> N. 3 and N. 12
<b><u>IGNITION LIVE</u></b> 	<b>BLACK-ORANGE</b> 0,75 mmsq	<i>Connector:</i> 12-pin WHITE_connected to the rear side of the connectors group, under the instruments. <i>Position:</i> N. 1
<b><u>1° ENGINE IMMOBILISATION:</u></b> (starter motor)  Use A 30 Amp. Gemini 2352 relay.	<b>BLACK-YELLOW</b> 0,75 mmsq	<i>Connector:</i> 19-pin WHITE_behind the left bulkhead of the central tunnel. <i>Position:</i> N. 18
<b><u>2° ENGINE IMMOBILISATION:</u></b> ( FUEL PUMP – PETROL VEHICLES) 	<b>BLACK-ORANGE</b> 0,75 mmsq	<i>Connector:</i> 12-pin WHITE_connected to the rear side of the connectors group, under the instruments. <i>Position:</i> N. 1
<b><u>CENTRAL DOOR LOCKING:</u></b> - diagram N. 2 - common negative. 	<i>To open:</i> <b>BLUE</b> 0,75 mmsq <i>To close:</i> <b>BLUE-BLACK</b> 0,75 mmsq	<i>Connector:</i> 12-pin WHITE positioned in the connectors group from the driver's door. <i>Position:</i> N. 10 and N. 9
<b><u>ELECTRIC WINDOWS:</u></b> use a module 2244 	<i>FRONT:</i> a. + ↑ L.h.s.: <b>GREEN</b> ref. GREY 1,5 mmsq b. + ↑ R.h.s.: <b>GREEN-WHITE</b> ref. GREY 1,5 mmsq	a. Connected to the control switches inside the driver's door. b. Driver's door harness.
<b><u>DOOR AND BOOT PIN SWITCHES:</u></b> 	<b>RED-WHITE</b> ref. GREY 0,75 mmsq	<i>Connector:</i> 7-pin WHITE_positioned behind the driver's kick plate. <i>Position:</i> N. 3
<b><u>BONNET PIN SWITCH:</u></b> Install the button supplied with the kit next to the bonnet rubber on the driver's side.		

**VEHICLE KEY FOR RADIO KEY TRANSMITTER:** Blade Kit RK N. 39

**NOTE:** the voltage sensing circuit can be isolated

N.B. THE ABOVE MENTIONED INFORMATIONS ARE ONLY INDICATIVE. THE MANUFACTURER RESERVES THE RIGHTS TO EXECUTE MODIFICATION WITHOUT PRIOR NOTICE.