

ALARM POSITIONING

Compact units and sirens
Control units and modules

- ⇒ On the shock absorber turret on the passenger's side.
⇒ Under the driver's dashboard.








WIRING LOCATION

- ⇒ Use the original harness positioned next to the shock absorber turret on the passenger's side.

EARTH CONNECTION

Positive and Negative

- ⇒ to the battery terminals.

FUNCTION AND MODALITY OF THE CONNECTION	VEHICLES WIRE COLOUR	WIRE POSITIONING
<u>DIRECTION INDICATOR LIGHTS:</u> 	GREEN-BLACK 1 mmsq GREEN-YELLOW 1 mmsq	<u>Connector:</u> 14-pin WHITE_connected to the fuse box. <u>Position:</u> N. 2 and N. 5
<u>IGNITION LIVE</u> 	BLACK-YELLOW 4 mmsq	<u>Connector:</u> 8-pin next to the ignition switch.
<u>1° ENGINE IMMOBILISATION:</u> (starter motor)  Use A 30 Amp. Gemini 2352 relay.	BLACK-WHITE 4mmsq	<u>Connector:</u> 8-pin next to the ignition switch.
<u>2° ENGINE IMMOBILISATION:</u> (FUEL PUMP – PETROL VEHICLES) 	BLUE-BLACK 1,5 mmsq	Wiring harness that supplies the rear equipments, behind the driver's kick plate.
<u>CENTRAL DOOR LOCKING:</u> - diagram N. 2 - common negative. 	<u>To open:</u> BROWN-YELLOW ref. GREY 0,75 mmsq <u>To close:</u> BROWN-WHITE ref. GREY 0,75 mmsq	<u>Connector:</u> 13-pin GREY behind the driver's kick plate. <u>Position:</u> N. 13 <u>Connector:</u> 22-pin BLUE behind the driver's kick plate. <u>Position:</u> N. 6
<u>ELECTRIC WINDOWS:</u> use a module 2243 	<u>Front:</u> a. + ↑ L.h.s.: RED-YELLOW ref. GREY b. + ↑ R.h.s.: GREEN-WHITE ref. GREY <u>Rear:</u> c. + ↑ L.h.s.: RED-YELLOW ref. GREY d. + ↑ R.h.s.: L. BLUE-BLACK ref. GREY All of 2 mmsq	a. <u>Connector:</u> 14-pin WHITE connected to the control switches inside the driver's door. b.c.d. <u>Connector:</u> 22-pin BLUE behind the driver's kick plate..
<u>DOOR AND BOOT PIN SWITCHES:</u> 	WHITE-RED 0,75 mmsq	<u>Connector:</u> 14-pin WHITE_connected to the fuse box. <u>Q:</u> N. 14
<u>BONNET PIN SWITCH:</u> Install the button supplied with the kit on the passenger's light.		

VEHICLE KEY FOR RADIO KEY TRANSMITTER: Blade kit RK N. 39

NOTE: the voltage sensing circuit can be isolated