

ALARM POSITIONING

Compact units and sirens
Control units and modules

- ⇒ On the shock absorber turret on the passenger's side.
⇒ Under the driver's dashboard

 



 



WIRING LOCATION

- ⇒ Use the original harness on the passenger's side.

EARTH CONNECTION

Positive and Negative

- ⇒ to the battery terminals.

FUNCTION AND MODALITY OF THE CONNECTION	VEHICLES WIRE COLOUR	WIRE POSITIONING
<u>DIRECTION INDICATOR LIGHTS:</u> 	GREEN-YELLOW ref. GREY 0,75 mmsq GREEN-BLACK ref. GREY 0,75 mmsq	<u>Connector:</u> multiple BLACK (14-pin section) under the steering column.
<u>IGNITION LIVE</u> 	GREEN 1,5 mmsq	Connected to the relay initialled CIRCUIT OPENING in the fuse box. <u>Position:</u> N. 4
<u>1° ENGINE IMMOBILISATION:</u> (starter motor)  Use A 30 Amp. Gemini 2352 relay.	BLACK-WHITE 2,5 mmsq	Connected to the ignition switch.
<u>2° ENGINE IMMOBILISATION:</u> (FUEL PUMP – PETROL VEHICLES) 	GREEN 1,5 mmsq	Connected to the relay initialled CIRCUIT OPENING in the fuse box. <u>Position:</u> N. 4
<u>CENTRAL DOOR LOCKING:</u> - diagram N. 2 - common negative. 	<u>To open:</u> BLUE-RED ref. GREY 0,75 mmsq <u>To close:</u> BLUE-PINK 0,75 mmsq	<u>Connector:</u> 9-pin WHITE connected to the closure unit positioned on the right side of the ignition switch. <u>Position:</u> N. 9 and N. 5
<u>ELECTRIC WINDOWS:</u> use a module Gemini 2244 module. 	<u>Front:</u> a. + ↑ L.h.s.: GREEN-WHITE ref. BROWN 1,5 mmsq b. + ↑ R.h.s.: GREEN 1,5 mmsq	a. Connected to the control switches inside the driver's door. b. Driver's door harness.
<u>FRONT DOOR PIN SWITCHES:</u> 	RED-YELLOW ref. GREY 0,75 mmsq	In the wiring harness behind the passenger's kick plate.
<u>BONNET PIN SWITCH:</u> Install the button supplied with the kit on the passenger's light.		
<u>BOOT PIN SWITCHES:</u> 	RED-WHITE ref. GREY 0,75 mmsq	Connected to the boot light.

VEHICLE KEY FOR RADIO KEY TRANSMITTER: Blade Kit RK N. 39

NOTE: the voltage sensing circuit can be isolated

N.B. THE ABOVE MENTIONED INFORMATIONS ARE ONLY INDICATIVE. THE MANUFACTURER RESERVES THE RIGHTS TO EXECUTE MODIFICATION WITHOUT PRIOR NOTICE.